


INSTALLATION INSTRUCTIONS FOR THE GTUU5 PERIMETER GROMMET

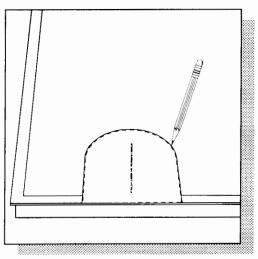

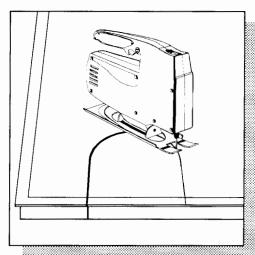

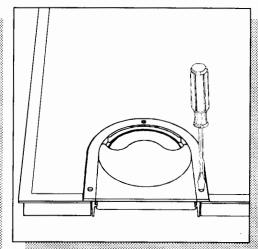

- Trace pattern on floor panel
- Use jig saw and cut along traced pattern
- Insert grommet w/
 cover and fasten w/
 sheet metal screws
 or rivets

Panel Edge -**GTUU5 PERIMETER GROMMET PATTERN**